




Sony Xperia U Headphone Jack Replacement

This guide will show how to replace the Headphone jack when it needs to be changed.

Written By: Bader

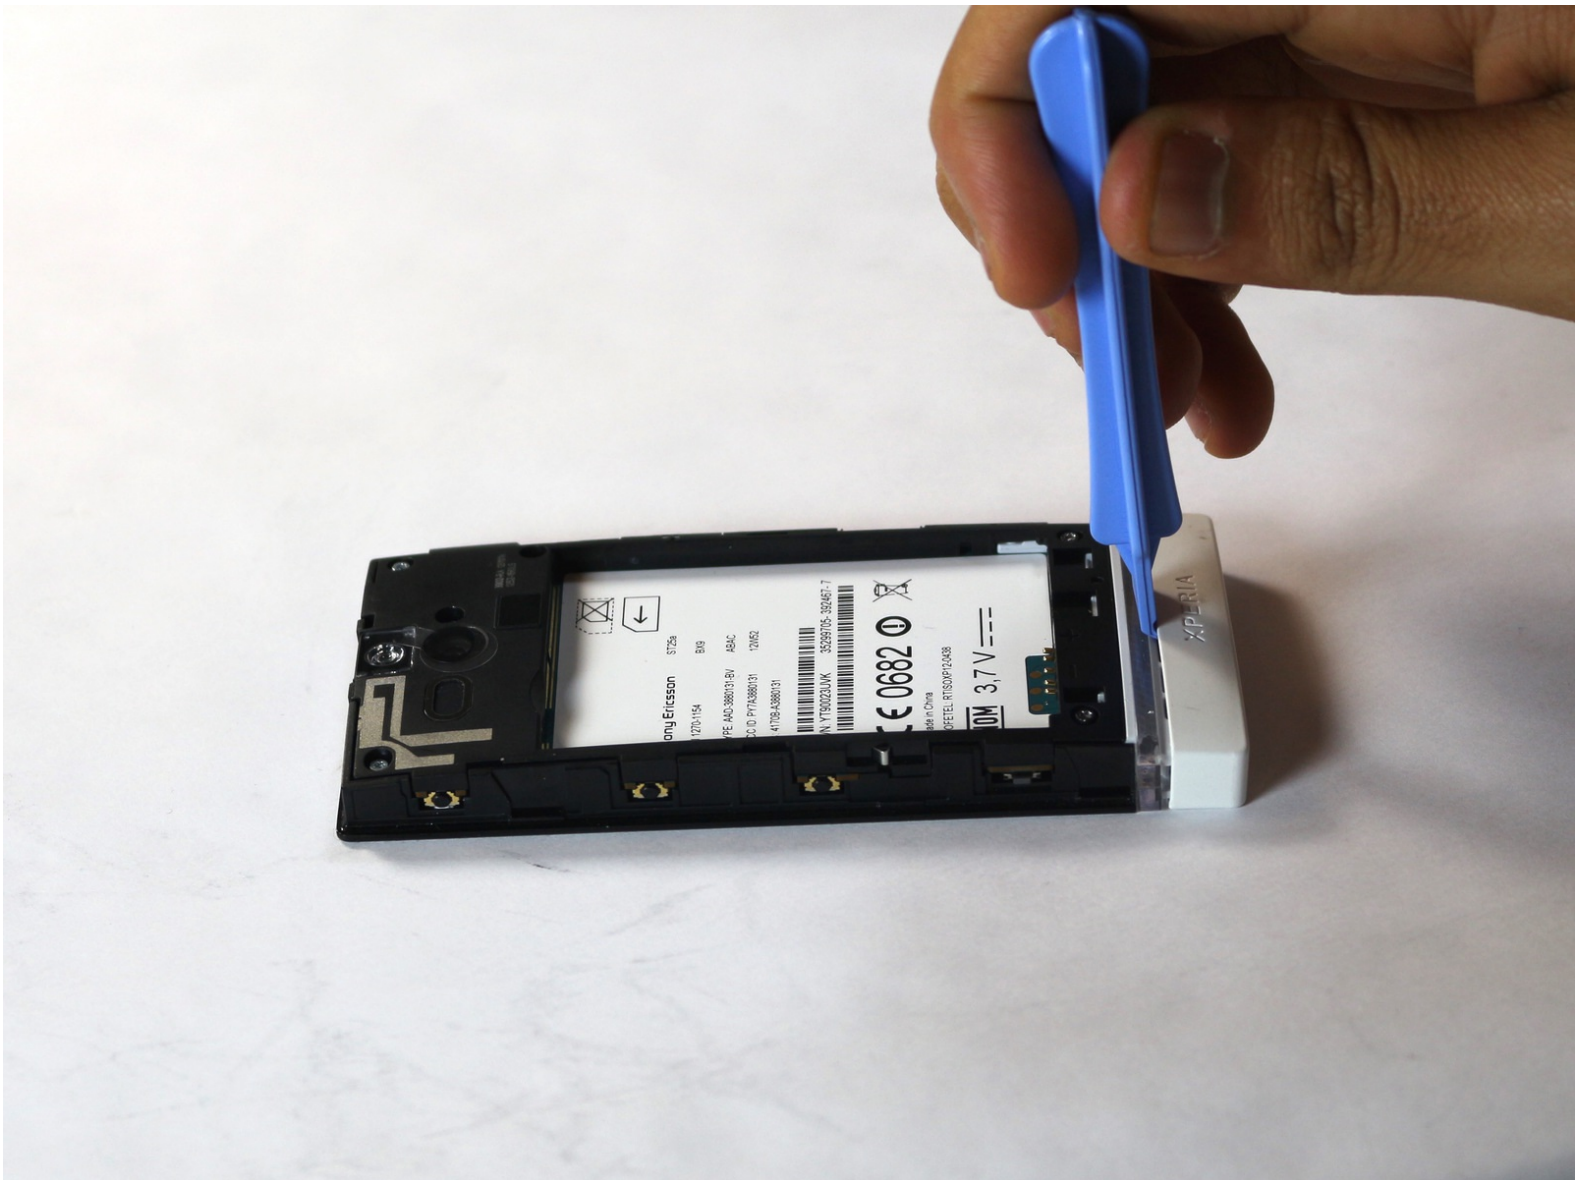

INTRODUCTION


If your phone's earphone jack is not working properly, follow these steps to assist you in replacing the headphone jack.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery

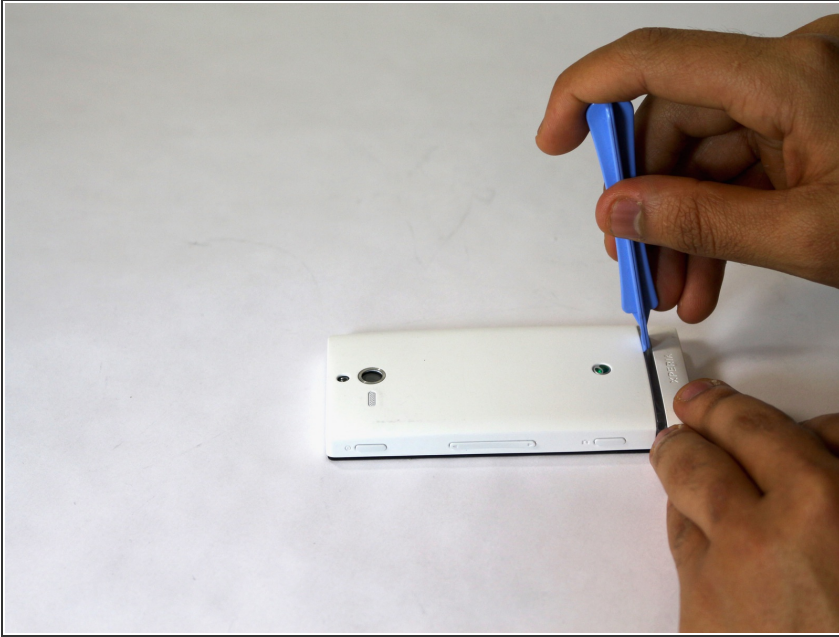


- Set the phone so the screen is facing down.
- Insert the plastic opening tool in the groove located between the body of the phone and the back plate protecting the battery
- Pop the white back plate off with the plastic opening tool.

Step 2



- Insert the plastic opening tool in between the battery and the phone body, which is housing the battery.
- Use the plastic opening tool to pry up on the side of the battery, then remove the battery and set it aside.

Step 3 — Headphone Jack

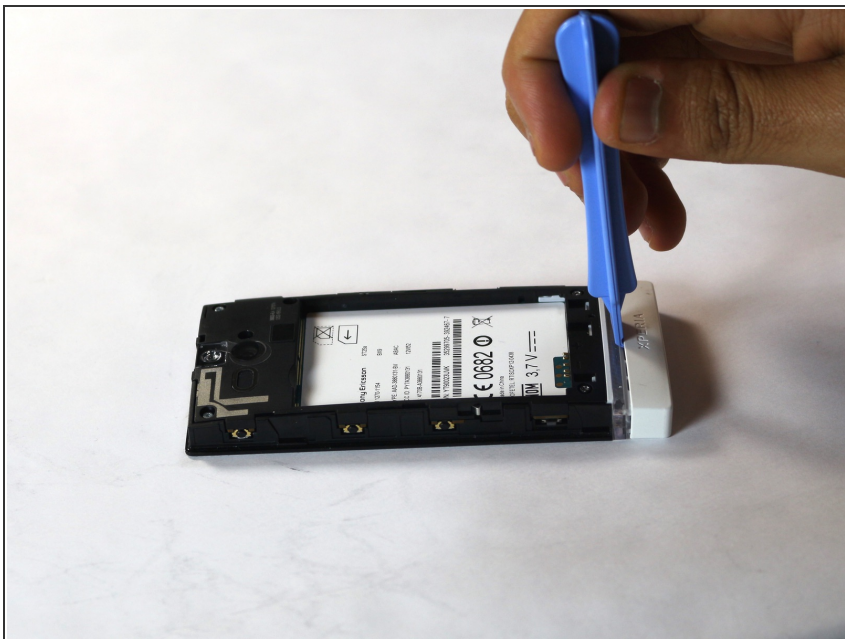


- Insert the plastic opening tool in between the white plastic cover and the body of the phone.
- Pop the plastic cover off by gently pushing forward on the plastic opening tool while it is in between the cover and the phone.

Step 4




- Remove the six size 0 Phillips screws.

Step 5

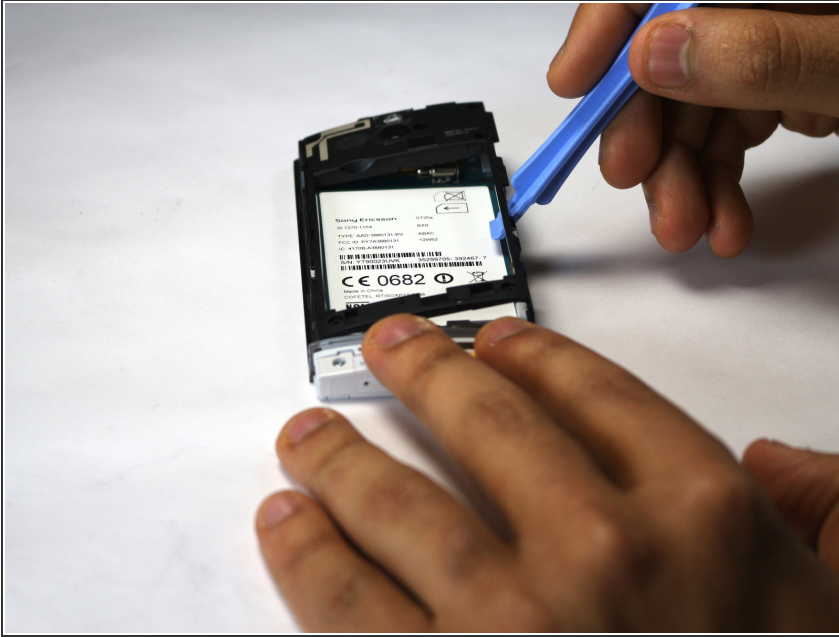

- Insert the plastic opening tool in between the body of the phone and the thin plastic back cover.
- Lift the black back cover off of the body with the plastic tool.

Step 6

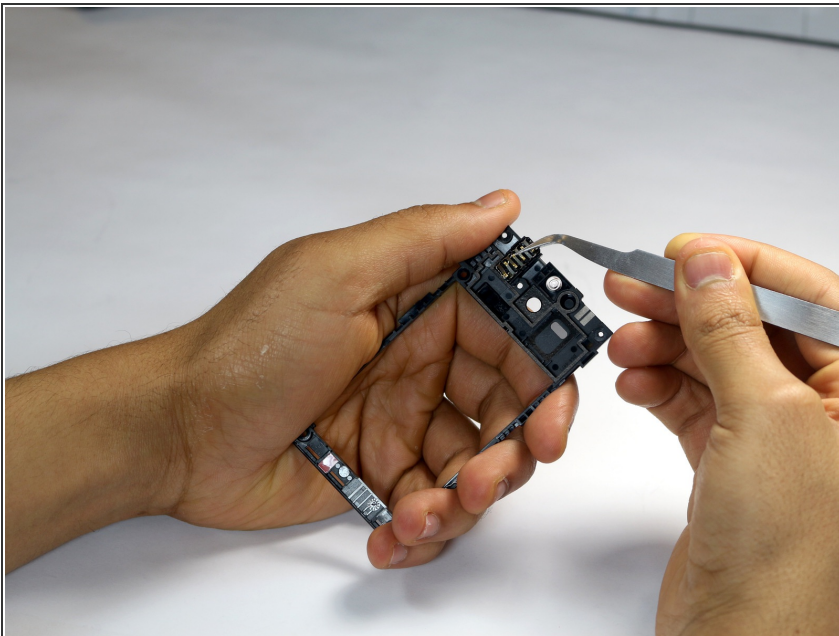

- Locate the earphone jack on the top left of the black plastic back cover.
- Use the tweezers to pinch the earphone jack and remove it from the back cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 10:03:52 PM.